

# ALLNIC AUDIO

## T-1800

### EL34 STEREO INTEGRATED AMPLIFIER



## OWNER'S MANUAL

## ALLNIC AUDIO

### T-1800 EL34 STEREO INTEGRATED AMPLIFIER

Thank you for purchasing the Allnic Audio T-1800 EL34 Stereo Integrated Amplifier. We are certain your trust in Allnic Audio and Hammertone Audio, as well as your appreciation for the sound of this high-quality device, will be rewarded by its excellent operation for years to come.

Please read this entire manual before you connect the T-1800 EL34 Stereo Integrated Amplifier to the other components of your system and the wall outlet.



MUSICAL  
TRUTH

David Beetles CEO

**HAMMERTONE**  
**AUDIO**

#### Hammertone Audio

101 Skyland Drive, Kelowna, British Columbia, Canada V1V 3A3

Direct Telephone: (250) 862-9037 (David Beetles)

Email: [david@hammertoneaudio.com](mailto:david@hammertoneaudio.com)

Website: [www.hammertoneaudio.com](http://www.hammertoneaudio.com)

**\*\* Information and specifications for the Allnic Audio product described in this manual are subject to change without notice.**

## TABLE OF CONTENTS:

---

INTRODUCING THE <b>T-1800</b> EL34 STEREO INTEGRATED AMPLIFIER	3
WHAT'S IN THE BOX?	4
SAFETY	4
CLEANING Chassis Connectors	4
INITIAL SET-UP Location, Location, Location Inputs Speaker Terminals Power Connection	5
INITIAL POWER ON	6
OPERATION – CHASSIS AND REMOTE CONTROLS The Current Meters	6
TUBES	7
SPECIFICATIONS	7
WARRANTY	8
FIGURES	8

---

Please read about **SAFETY** before you attempt to use the T-1800 - we care about our customers and the equipment, and we want you to enjoy this product for a long time!

## INTRODUCING THE T-1800 EL34 STEREO INTEGRATED AMPLIFIER

The T-1800 stereo integrated amplifier is Allnic Audio's EL34 stereo integrated amplifier model. Like all Allnic Audio products, the T-1800 has Permalloy (iron and nickel alloy) for its transformer cores. Allnic is grateful to Mr. G.W. Elmen of Western Electric for inventing Permalloy for transformer core use, and in so doing, providing an enormous service to recorded music listeners everywhere.

The T-1800 has the following features:

- 40 watts of high power output. The T-1800 is a push-pull, EL34 power tube based stereo integrated amplifier.
- Remote controlled 41 step silver contact attenuator. The T-1800 employs this house made quality attenuator instead of standard, outsourced carbon film potentiometers. The Allnic attenuator provides complete channel balance and less distortion.
- Powerful Driving Circuitry. Allnic believes in the importance of using high-quality, low noise and powerful driving circuitry in all its amplifying devices. The T-1800 uses only two stages of driving circuit.
- "Full Engagement" Output Transformers. Conventional output transformers use pre-set secondary windings to accommodate 4, 8 and 16 ohm loudspeaker loads. However, these conventional transformers utilize only one secondary winding at a time, while the other secondary windings remain "idle". This approach has two adverse effects. First, the output transformers are not working at their maximum efficiency, reducing their output relative to their potential. Second, the "idle" windings are not actually "idle"; they are subject to parasitic oscillations, producing their own "signal". This undesirable electrical information is additive to the transformer's output, distorting the amplified signal going to the loudspeaker. Allnic's "Full Engagement" transformers address these issues by having 4 independent, secondary windings that are always fully connected, never "idled". This means that all secondary windings are always connected to your loudspeakers, regardless of which output switch position you use (4 ohms or 8 ohms or 8 ohms or 16 ohms, depending on the factory configuration you have selected). The result is that there is neither a loss of transformer output efficiency, nor the introduction into the output signal of distortion from parasitic oscillations of the secondary windings.
- Large Nickel/FeSi Core Output Transformers. As with our other models, Allnic uses very large output transformers (96 mm) with nickel, mixed with FeSi, cores. This provides for higher inductance with fewer windings than other designs can provide and results in the great benefit of an extremely wide range of output frequencies.
- "Soft-start" Circuitry. Allnic uses soft start circuitry that, after sufficient warm-up only, provides the high voltage supply to the plate of each tube. This protective design results in prolonged tube life and fewer and less frequent issues with tube performance.
- Analogue Power Tube Current Monitors. In order to provide constant current (bias) monitoring for the power tubes, Allnic uses a separate analogue current meter for each tube. The meters make it exceptionally easy to see the status of each tube at any time. The meters offer a simple, unambiguous indication of each tube's status compared to conventional LED bias monitors.
- As are all Allnic Audio products, the T-1800 is fully RoHS (EU Reduction of Hazardous Substances regulation) compliant in construction and materials.

## WHAT'S IN THE BOX?

Please check that the shipping box contains the following:

- One (1) Allnic T-1800 EL34 stereo integrated amplifier
- One (1) Allnic remote control
- One (1) Allen wrench for screws on top of the tube chimneys
- One (1) IEC type power cord
- One (1) Owner's Manual

Note:

- 1) The T-1800 ships with the tubes installed.
- 2) The T-1800 will work with most IEC type aftermarket power cords. Of course, only you can determine the power cord that works most synergistically with the T-1800 in your system.
- 3) Be sure the T-1800 is labeled for the AC voltage of your location. If it is not, please contact Hammertone Audio.

We advise that you keep the boxes and other packing materials that your T-1800 came in. It will be useful if you sell your T-1800 or in the unlikely event you need to ship it for service.

## SAFETY

- **Remove ALL protective cushioning material (cardboard around the tubes) inside the tube chimneys before operation. The tube chimneys should contain NOTHING except the tubes (It is optional to leave the "O" rings on the small tubes; some prefer the sound with the O rings on).**
- Disconnect the power cord by pulling the plug, not the cable.
- Do not attempt any repairs. Do not remove the unit's chassis cover without specific authorization from Hammertone Audio.
- Keep the power cord away from heat sources
- Keep the unit away from liquids – do not allow any liquid to enter the interior of the unit.
- When the unit is moved from a cold to a warm environment, allow sufficient time for any condensation to evaporate before plugging the T-1800 into an AC connection.
- Do not attempt any repairs.
- See the notes on "Location, Location, Location".

## CLEANING

A. Chassis and glass/plastic

Use only a soft, lint-free cloth, dampened slightly with water only (NO cleaning fluids!), to clean the faceplate, chassis and tube chimneys of the T-1800.

B. Connectors

You may use any good quality contact cleaner recommended for such applications to clean the contacts from time to time, as you deem appropriate.

## INITIAL SET-UP

### A. LOCATION, LOCATION, LOCATION

Like all audio products using tubes, the Allnic Audio T-1800 needs to be placed on a solid stand in a location that provides good air circulation around, above and below the stereo amplifier.

- DO NOT cover the top of the T-1800.
- DO NOT place the unit on carpet or foam.
- DO NOT subject the unit to knocks and shocks as you move it around. This advice is meant particularly for those who may want to place the T-1800 on some kind of after-market isolation feet or similar devices. Dropping one side of the T-1800, or the whole of the unit, is not a good thing to do.
- DO NOT place the unit near a strong light or heat source.
- DO NOT place anything heavy on the unit.
- DO NOT allow rubber or vinyl materials to rest on the chassis for long periods of time. This could discolour the metal.
  
- DO place the unit on a shelf or stand that is stable and not subject to vibration or sudden shock.
- DO consider using a high quality power cord, inter-connects and speaker cables. The T-1800 is a highly sensitive piece of electronic designed for neutrality and will output what you put into it.
- DO try to place T-1800 away from major sources and potential receivers of RFI and EMI. Though well shielded, the T-1800 will function best away from large power transformers and other sources of such interference and from other equipment that could be susceptible to/sources of such forms of interference.

### B. INPUTS

There are four (4) RCA type female input pairs and one (1) female balanced (XLR) input pair. Facing the rear of the chassis, the input connections are to the right of the IEC power input and the Pre Out terminal pair. The left channel connector is the top one in each line input pair. Please refer to Figure 2.

You can use the T-1800 with a separate preamplifier by connecting the outputs of the preamplifier to one pair of the T-1800's inputs. **HOWEVER, please use caution when you do this. If you have both volume controls above zero on turn on, especially with signal, you could damage your speakers because of the extreme volume level from the combined gain of both the preamplifier and the T-1800.** On initial turn on with a separate pre-amp, you should have the volume on BOTH units set to zero. Then use the volume control on both the pre-amp and the T-1800 to set the volume control on the T-1800 so that you can use preamplifier volume control as the main volume control – OR vice versa, as you prefer.

### C. PRE OUT CONNECTIONS

The T-1800 has a pair of RCA type female Pre Out (Preamplifier outputs – refer to Figure 2) connections on the rear of the chassis, between the IEC connection and the Line Inputs. The Pre Outs are connected actively; therefore, when they are in use, the EL34s continue to draw power and operate. These connections are intended especially for connection to one or a pair of powered subwoofers. However, it is also possible to use them to connect to an external stereo power amplifier or pair of monoblock amplifiers (preferably with the same gain as the T-1800).

#### D. SPEAKER TERMINALS

The T-1800 is equipped with two pairs of high-quality speaker terminals. These terminals are located at the left of the back of the chassis (the right, facing the front of the chassis). Facing the front of the chassis, the right channel pair is on the outside right and the left channel pair is to their left, on the other side of the impedance toggle. The terminals accept bare wire (not recommended) and spade and banana type connectors. Please refer to Figure 2.

#### D. POWER CONNECTION

Connect the input interconnects and/or the speaker cables or the Pre Out connections before you insert the power cable into the receptacle at the centre of the chassis rear. The T-1800 uses a standard three prong male IEC connection for AC input. You need to use a power cord with a female three prong IEC connector at one end. Please refer to Figure 2.

The T-1800 you have purchased is set internally for AC 110/120 volt – 60 HZ operation. There is no way to change this to another AC setting without return of the unit to the factory for re-wiring, at the owner's cost, including transport both directions.

#### INITIAL POWER-ON

Once you have your T-1800 in place and all connections have been made to your turntable and preamplifier, you are ready to turn on the power for your T-1800; before you power it up, though, be sure you have:

- **removed ALL protective cushioning material (cardboard around the tubes) inside the tube chimneys before operation. The tube chimneys should contain NOTHING except the tubes (It is optional to leave the "O" rings on the small tubes; some prefer the sound with the O rings on.)**
- **checked that power tubes are snug in their sockets. This is essential.**
- ensured the interconnects are firmly attached
- **turned the preamplifier's and T-1800's volume controls down to zero (if you use that combination) and otherwise zeroed or muted the volume on your source(s).**
- securely and correctly fastened the speaker cables and ensured that they are also connected properly to the speakers.

Turn on the T-1800 by pushing in the power switch button located at the front of the right-side chassis panel to the "on" position (See Figure 3). After about a thirty to forty (30 - 40) second delay (the soft start), the T-1800 will be powered on.

#### OPERATION - CHASSIS AND REMOTE CONTROLS

When the power is on, the current meters on the face of the chassis will illuminate. From this point on, the T-1800's operation is straight-forward. The face of the chassis has an input selector control knob and a volume control knob (see Figure 1). The remote control (Figure 4) will also control the input selections and the volume. It will not control the power to the T-1800, which must be switched on and off manually, as described above. Remove screws on the bottom of the remote control to replace batteries.

When you are finished listening, turn off your T-1800 stereo amplifier(s) first; then, turn off your preamplifier (if using one) and sources.

In the case of any failure, please contact Hammertone Audio for assistance.

## THE CURRENT METERS

The two illuminated meters indicate the current supplies to the four EL34 power tubes in the T-1800. Between and to the outside of each channel pair of EL34s is a small toggle switch. Pushing the toggle toward the rear of the chassis allows you to read and use the meter to evaluate the current condition of the rear EL34; pushing the toggle toward the front switches the meter to the front EL34. You can use the toggle during operation. See Figure 5.

When you turn on the T-1800, the needle of the current meter for each EL34 should be between the two parallel lines on the meter face. Any error of current supply to or failure of an EL34 tube is indicated by the needle on the meter moving out from between these two parallel lines.

If a meter's needle drops below the left parallel line during operation, it indicates a failure of the related EL34 tube. You must turn off the T-1800 and replace the EL34. Check the meter for the other EL34 on that channel. If the meter needle is between the parallel lines, it is not necessary to replace that tube.

If you have any questions about doing this, please contact Hammertone Audio for assistance.

## TUBES

The T-1800 uses the following tubes:

- Two (2) x EL34
- Two (2) x E180CC
- One (1) x 12AY7

Because of the automatic bias for each EL34, it is recommended to use closely matched pairs of EL34 tubes in the T-1800. Please refer to Figure 5 for tube locations.

You may use any EL34 type tube in the T-1800. However, as with all tube equipment, changing tubes from one manufacturer's to another's may alter the sonic characteristics of the equipment. It is NOT recommended to substitute the EL34s with power tubes commonly considered similar to them.

All consequences of changing or attempting to change tubes are borne by the user unless by express agreement between the owner and Hammertone Audio. Allnic Audio and Hammertone Audio are not liable in any way whatsoever for any injury or loss incurred by the user or for damage to the T-1800, any of its parts, or tubes or replacement tubes resulting from the user changing or attempting to change tubes.

## SPECIFICATIONS FOR THE ALLNIC AUDIO T-1800 EL34 STEREO INTEGRATED AMPLIFIER

Output Power:	40w + 40w (8 $\Omega$ load, at 1KHz)
Distortion:	0.1% at 1KHz, 2.83V/8 ohms
Frequency Response:	20Hz - 20KHz Flat
S/N Ratio:	-80dB (CCIR, 1KHz)
Damping Factor:	8 at 8 $\Omega$ load at 1KHz (on-off method)
Voltage gain:	+38dB
Input Impedance:	10K $\Omega$ (single-ended, unbalanced)
Input Sensitivity:	400mV for rated power
Tubes:	<ul style="list-style-type: none"><li>• EL34 X 4 (power triode) Substitution is not recommended.</li><li>• E180CC X 2 (2<sup>nd</sup> stage driver tube: similar to 5965 and 7062 – superior to 12AT7 in this application)</li></ul>



	<ul style="list-style-type: none"> <li>• 12AY7 X1 (1<sup>st</sup> stage driver: possible to substitute 6072). Other tubes commonly considered similar are not recommended.</li> </ul>
Fuse:	AC Mains - 3A / 250V (110W)
Dimensions:	(W x D x H) 430mm (16.93 inches) X 330mm (13 inches) X 210mm (8.3 inches)
Weight:	<ul style="list-style-type: none"> <li>• Net: 20Kg (44 lbs)</li> <li>• Shipping: 23 Kg (50.6 lbs) shipping</li> </ul>


## WARRANTY

All Allnic Audio amplifier products are warranted against materials and manufacturing defects for parts, excluding tubes, and labour for two (2) years from date of purchase. Tubes are warranted against materials and manufacturing defects for one (1) year from date of purchase. The warranty is transferable for the balance of the original purchaser's warranty period, provided, as stated below, no unauthorized repairs or modifications have been performed on the product. Date of purchase is the date indicated on the invoice for the product issued by Hammertone Audio.


For the warranty to be valid, a defective product must be returned to Hammertone Audio for service prior to any unauthorized attempt to repair. Any repair work on an Allnic Audio product not specifically authorized by Hammertone Audio will void the warranty on the product.




Figure 1 – T-1800 EL34 Stereo Integrated Amplifier Front Panel View

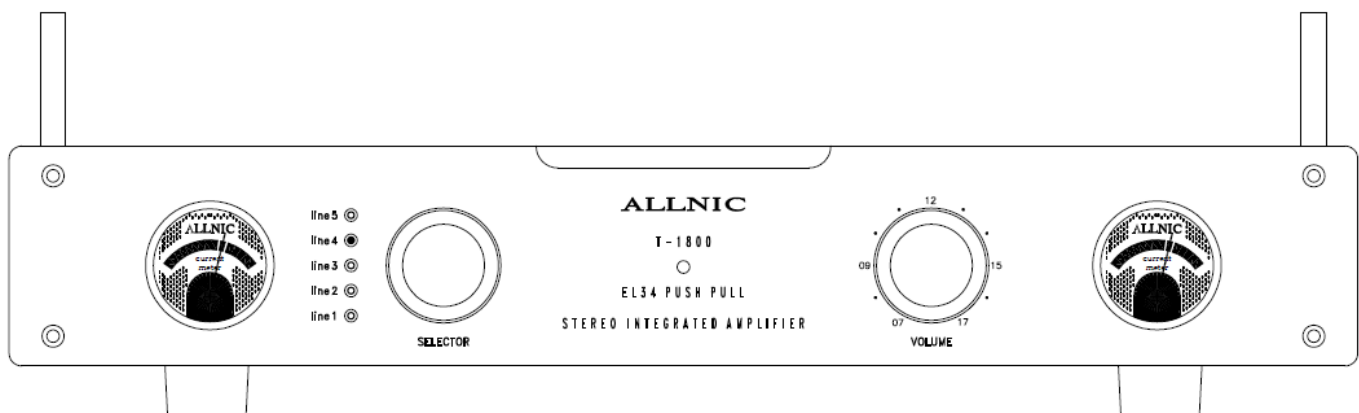 


**Figure 2 – T-1800 EL34 Stereo Integrated Amplifier Rear Panel View**

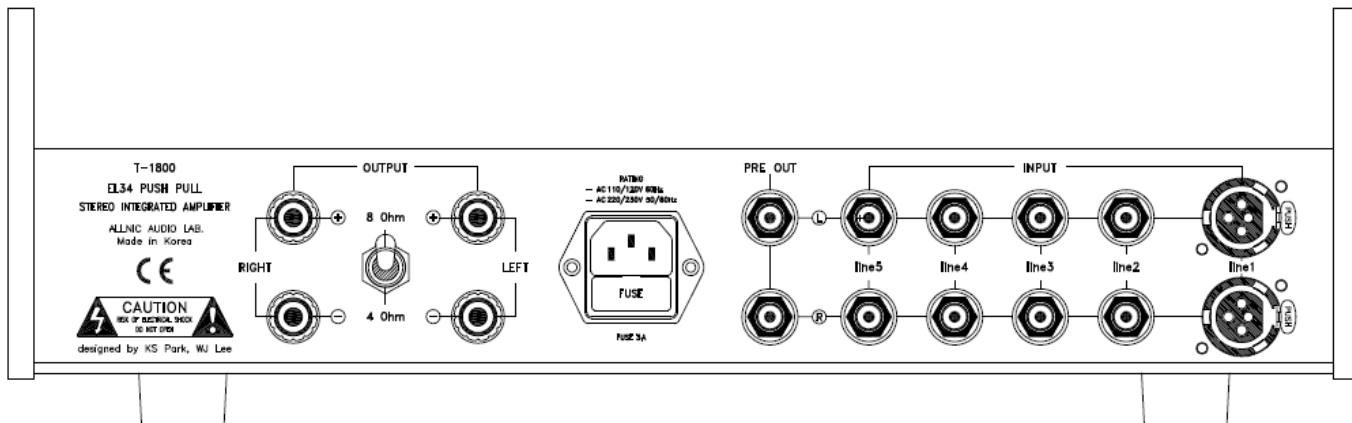 


**Figure 3 – T-1800 EL34 Stereo Integrated Amplifier Right-side Panel View**

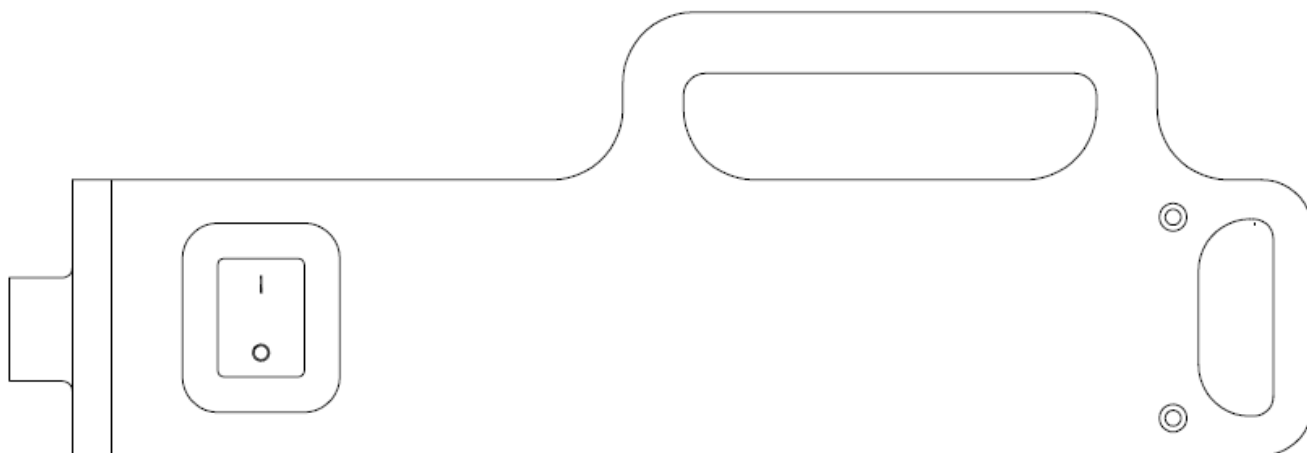 

**Figure 4 – T-1800 EL34 Stereo Integrated Amplifier Remote Control**

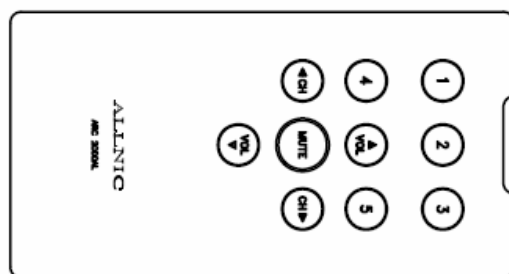 

**Figure 5 – T-1800 EL34 Stereo Integrated Amplifier Chassis Top View**

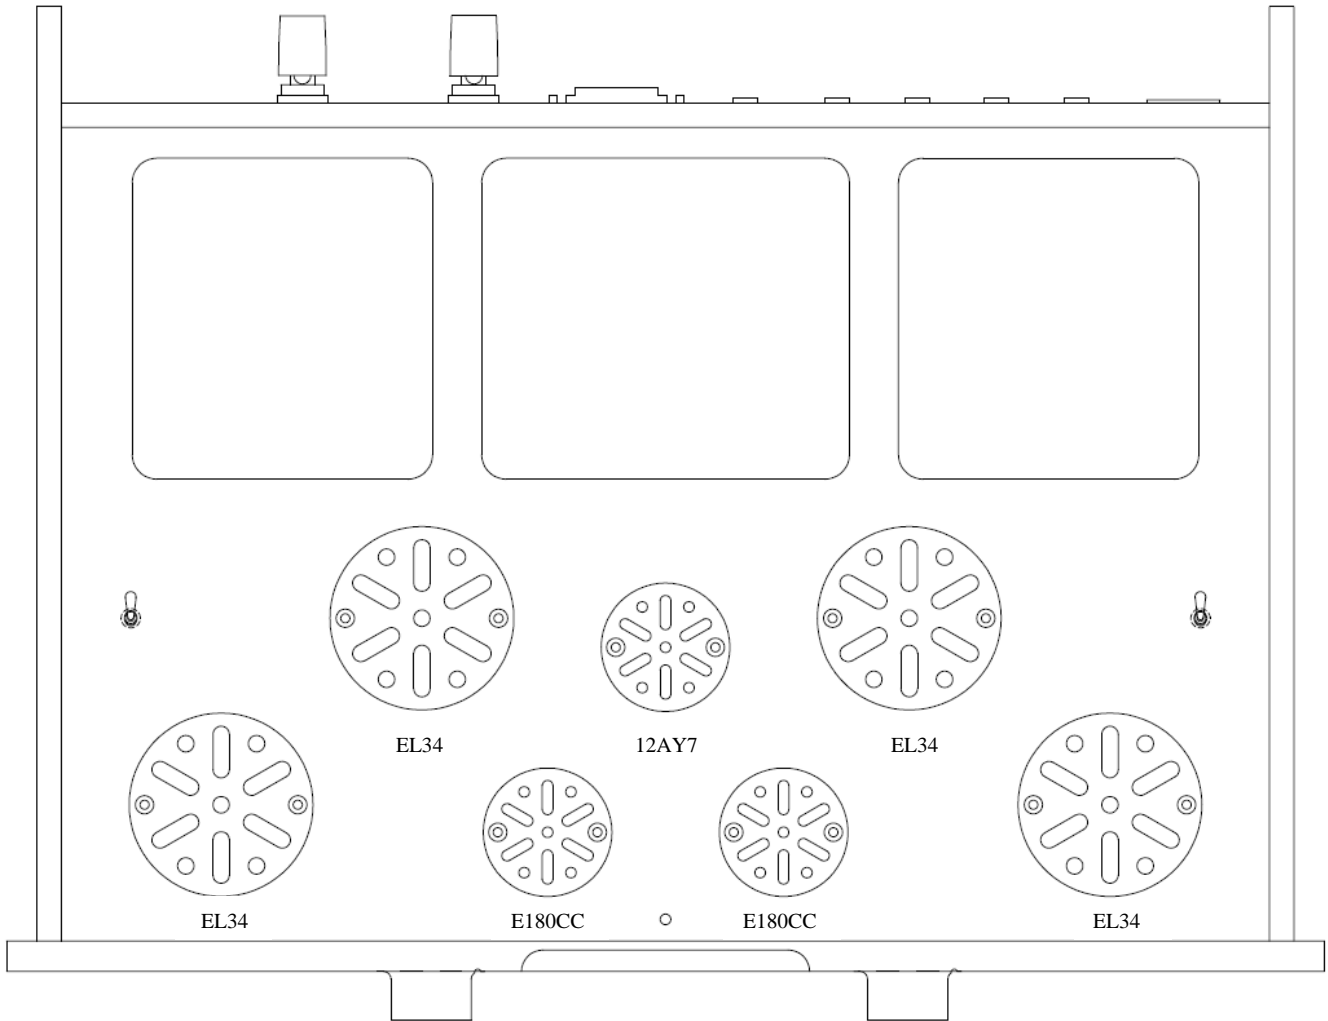 



MUSICAL  
TRUTH

David Beetles CEO

**HAMMERTONE**  
**AUDIO**

**Hammertone Audio**

**101 Skyland Drive, Kelowna, British Columbia, Canada V1V 3A3**

**Direct Telephone: (250) 862-9037 (David Beetles)**

**Email: [david@hammertoneaudio.com](mailto:david@hammertoneaudio.com)**

**Website: [www.hammertoneaudio.com](http://www.hammertoneaudio.com)**